

MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO


HONDA CBR900RR '02/'03 FIREBLADE

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE




MONORACK

Q.TY n.2 (dx-sx)



VITE TCEI M6X40
SCREW M6X40
VIS M6X40
SCHRAUBE M6X40
TORNILLO M6X40

Q.TY n.2




VITE TCEI M8X70
SCREW M8X70
VIS M8X70
SCHRAUBE M8X70
TORNILLO M8X70

Q.TY n.2



RONDELLA Ø 6X18
WASHER Ø 6X18
RONDELLE Ø 6X18
SCHEIBE Ø 6X18
ARANDELA Ø6X18

Q.TY n.2




VITE ORIGINALE
ORIGINAL SCREW
VIS ORIGINALE
ORIGINAL
SCHRAUBE
TORNILLO ORIGINALE

Q.TY n.-



MOUSSE PROTETTIVA
PROTECTION RUBBER
CAOUTCHOUC DE
PROTECTION
MOUSSEGUMMI
GOMA ESPUNOSA
ADESIVA

Q.TY n.4 2ds/2sx

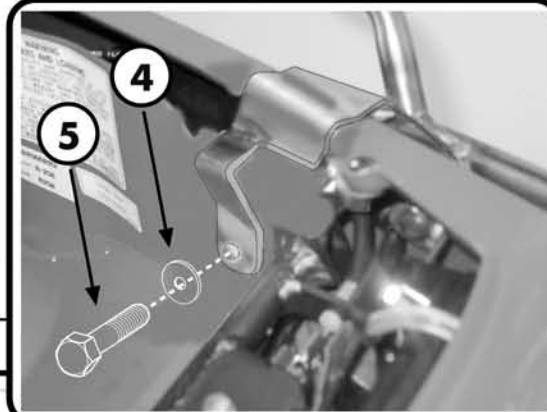

ATTENZIONE: CARICO MASSIMO 3 Kg.
WARNING: MAX LOAD 3 Kg.
ATTENTION: CHARGE MAXIMUM 3 Kg.
ACHTUNG: HOCHSTBECASTUNG 3 Kg.
ATENCION: CARGO MAX 3 Kg.

