


MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

HONDA CB500 '94/'96

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

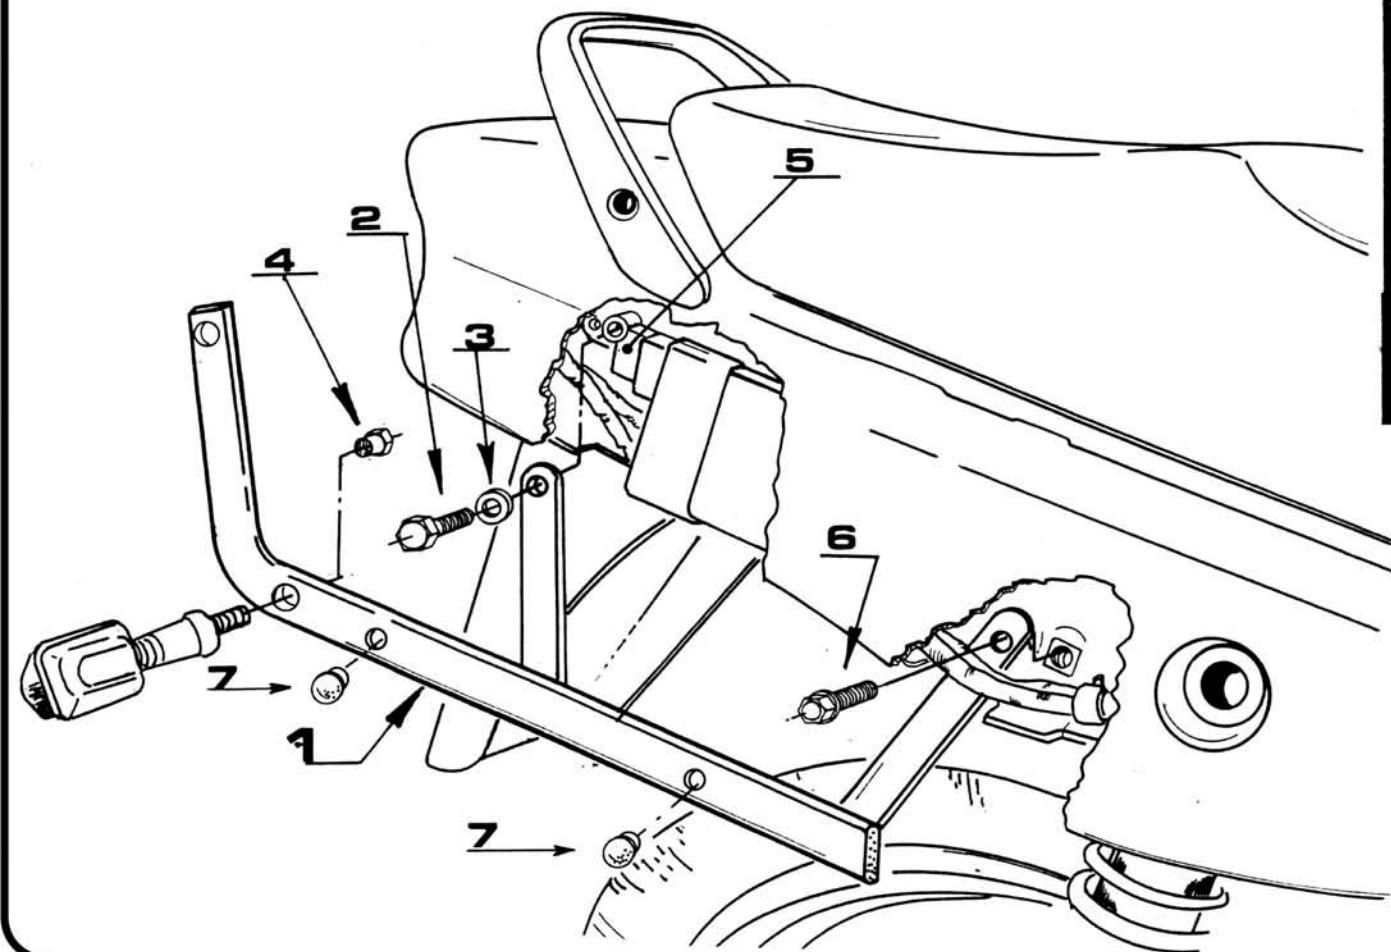

N°.	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE')
1	MONORACK	2
2	VITE TE M 8 X 40 (SCREW M 8 X 40) (VIS M 8 X 40)	2
3	RONDELLA Ø 8 (WASHER Ø 8) (RONDELLE Ø 8)	2
4	DADO SPECIALE (V 135) (SPECIAL NUT) (ECROU SPECIAL)	2
5	SUPPORTO (SUPPORT) (SUPPORT)	2
6	VITE ORIGINALE (ORIGINAL SCREW) (VIS D'ORIGINE)	-
7	TAPPO COPRIFORO SPECIALE (SPECIAL HOLE COVER CAP) (BOUCHON COUVRE TROU SPECIAL)	4