


YAMAHA XT600E '90/'94ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

- DATA LA PARTICOLARE CARATTERISTICA TECNICO-STRUTTURALE DEL TELAIO (PARTE INFERIORE) SI CONSIGLIA DI NON CARICARE SUL PORTAPACCHI UN PESO SUPERIORE AI 3 KG.
- AS THE CHASSIS HAS A PARTICULAR TECHNICAL AND STRUCTURAL CHARACTERISTIC (INFERIOR PART) IT WILL BE ADVISABLE NOT TO LOAD ON THE CARRIER A WEIGHT SUPERIOR OF KG 3.
- EN RAISON DES CARACTERISTIQUES TECHNIQUES PARTICULIERES ET STRUCTURELLES DU SUPPORT (PARTIE INFERIEURE) LA CAPACITE DE CHARGEMENT CONSEILLEE POUR LE PORTE-PAQUETS NE DOIT PAS ETRE SUPERIEURE A 3 KG.

ATTENZIONE: E' NECESSARIO ALZARE DI CIRCA 5 mm I GANCI PORTAELASTICI ORIGINALI.

WARNING: IT WILL BE NECESSARY TO LIFT UP OF ABOUT 5 mm THE ORIGINAL HOOKS FOR ELASTICS.

ATTENTION: IL FAUDRAIT LEVER LE PORTE ELASTIQUES D'ENVIRON 5 mm.

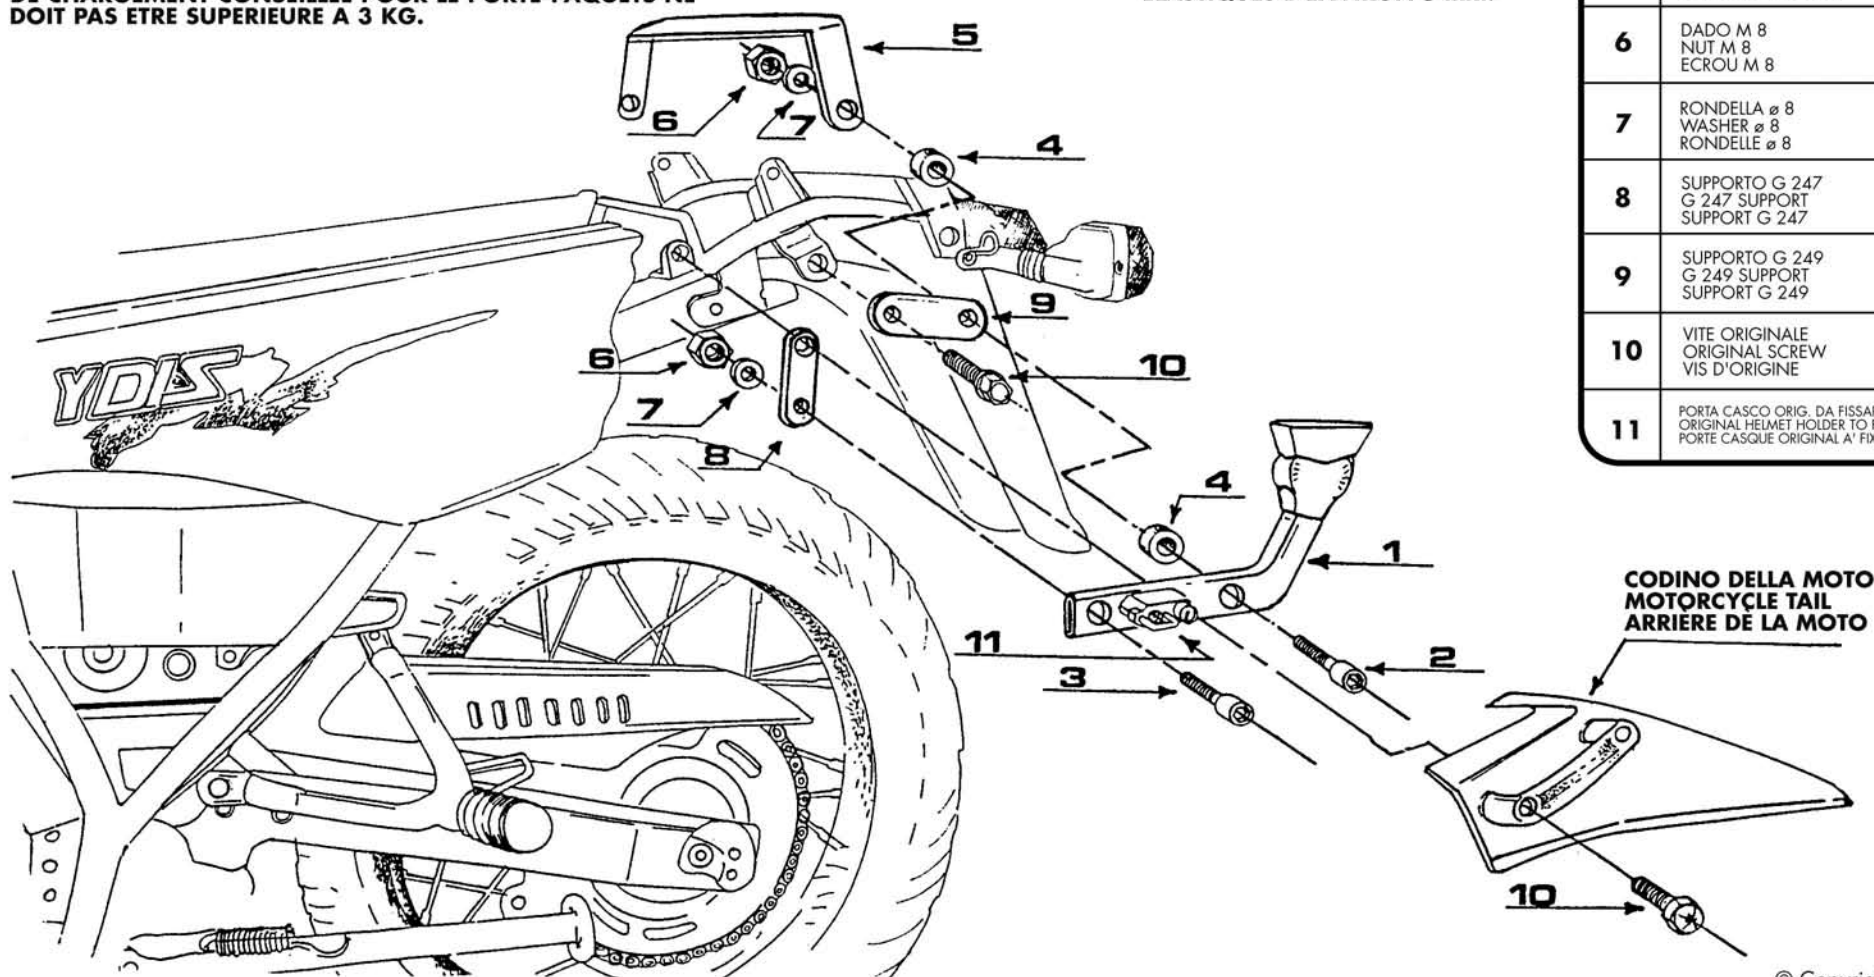

N°	DESCRIZIONE DEL KIT KIT DESCRIPTION DESCRIPTION DU KIT	QUANTITA' QUANTITY QUANTITE'
1	MONORACK	2
2	VITE TCEI M 8 X 50 SCREW M 8 X 50 VIS M 8 X 50	2
3	VITE TCEI M 8 X 20 SCREW M 8 X 20 VIS M 8 X 20	2
4	DISTANZIALE ø 20 X 10 COLLAR DISTANCE ø 20 x 10 COLLIER DE SEPARATION ø 20 x 10	4
5	SUPPORTO SUPERIORE TOP SUPPORT SUPPORT SUPERIEUR	1
6	DADO M 8 NUT M 8 ECROU M 8	4
7	RONDELLA ø 8 WASHER ø 8 RONDELLE ø 8	4
8	SUPPORTO G 247 G 247 SUPPORT SUPPORT G 247	2
9	SUPPORTO G 249 G 249 SUPPORT SUPPORT G 249	2
10	VITE ORIGINALE ORIGINAL SCREW VIS D'ORIGINE	-
11	PORTA CASCO ORIG. DA FISSARE AL MONORACK ORIGINAL HELMET HOLDER TO FIX TO MONORACK PORTE CASQUE ORIGINAL A' FIXER AU MONORACK	-