

MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

YAMAHA YZF1000 THUNDER ACE

1996

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - ISTRUCCIONES DE MONTAJE

1



Q.TY n.2(Dx-Sx)

2



SUPPORTO
SUPPORT
SUPPORT
TRAEGER
SOPORTES

Q.TY n.1

3



SUPPORTO
SUPPORT
SUPPORT
TRAEGER
SOPORTES

Q.TY n.2(Dx-Sx)


4



RONDELLA Ø6
WASHER Ø6
RONDELLE Ø6
SCHEIBE Ø6
ARANDELA Ø6

Q.TY n.8

5



VITE TE M6x20
SCREW M6x20
VIS M6x20
SCHRAUBE M6x20
TORNILLO M6x20

Q.TY n.2


6



DADO A.B. M6
BOLT M6
ECROU M6
MUTTER M6
TUERCA M6

Q.TY n.4


7



VITE TE M6x25
SCREW M6x25
VIS M6x25
SCHRAUBE M6x25
TORNILLO M6x25

Q.TY n.2


8



VITE TCEI M8x20
SCREW M8x20
VIS M8x20
SCHRAUBE M8x20
TORNILLO M8x20

Q.TY n.4

12



VITE TE M8x35
SCREW M8x35
VIS M8x35
SCHRAUBE M8x35
TORNILLO M8x35


Q.TY n.4

13




SUPPORTO
SUPPORT
SUPPORT
TRAEGER
SOPORTES

Q.TY n.2(Dx-Sx)

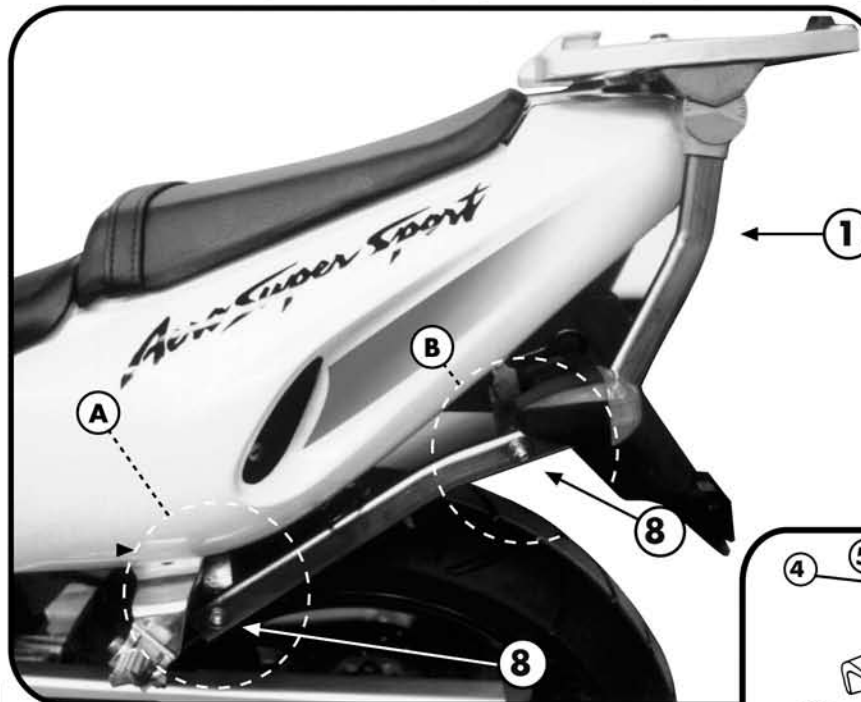

9



VITE TE M6x16
SCREW M6x16
VIS M6x16
SCHRAUBE M6x16
TORNILLO M6x16

Q.TY n.2

10



RONDELLA Ø8
WASHER Ø8
RONDELLE Ø8
SCHEIBE Ø8
ARANDELA Ø8

Q.TY n.4

11



DISTANZIALE Ø16x4
SPACER
ENTRETOISE
DISTANZSTUECK
DISTANCIADOR

Q.TY n.2

