


MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

SUZUKI VX800 '90/'92

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

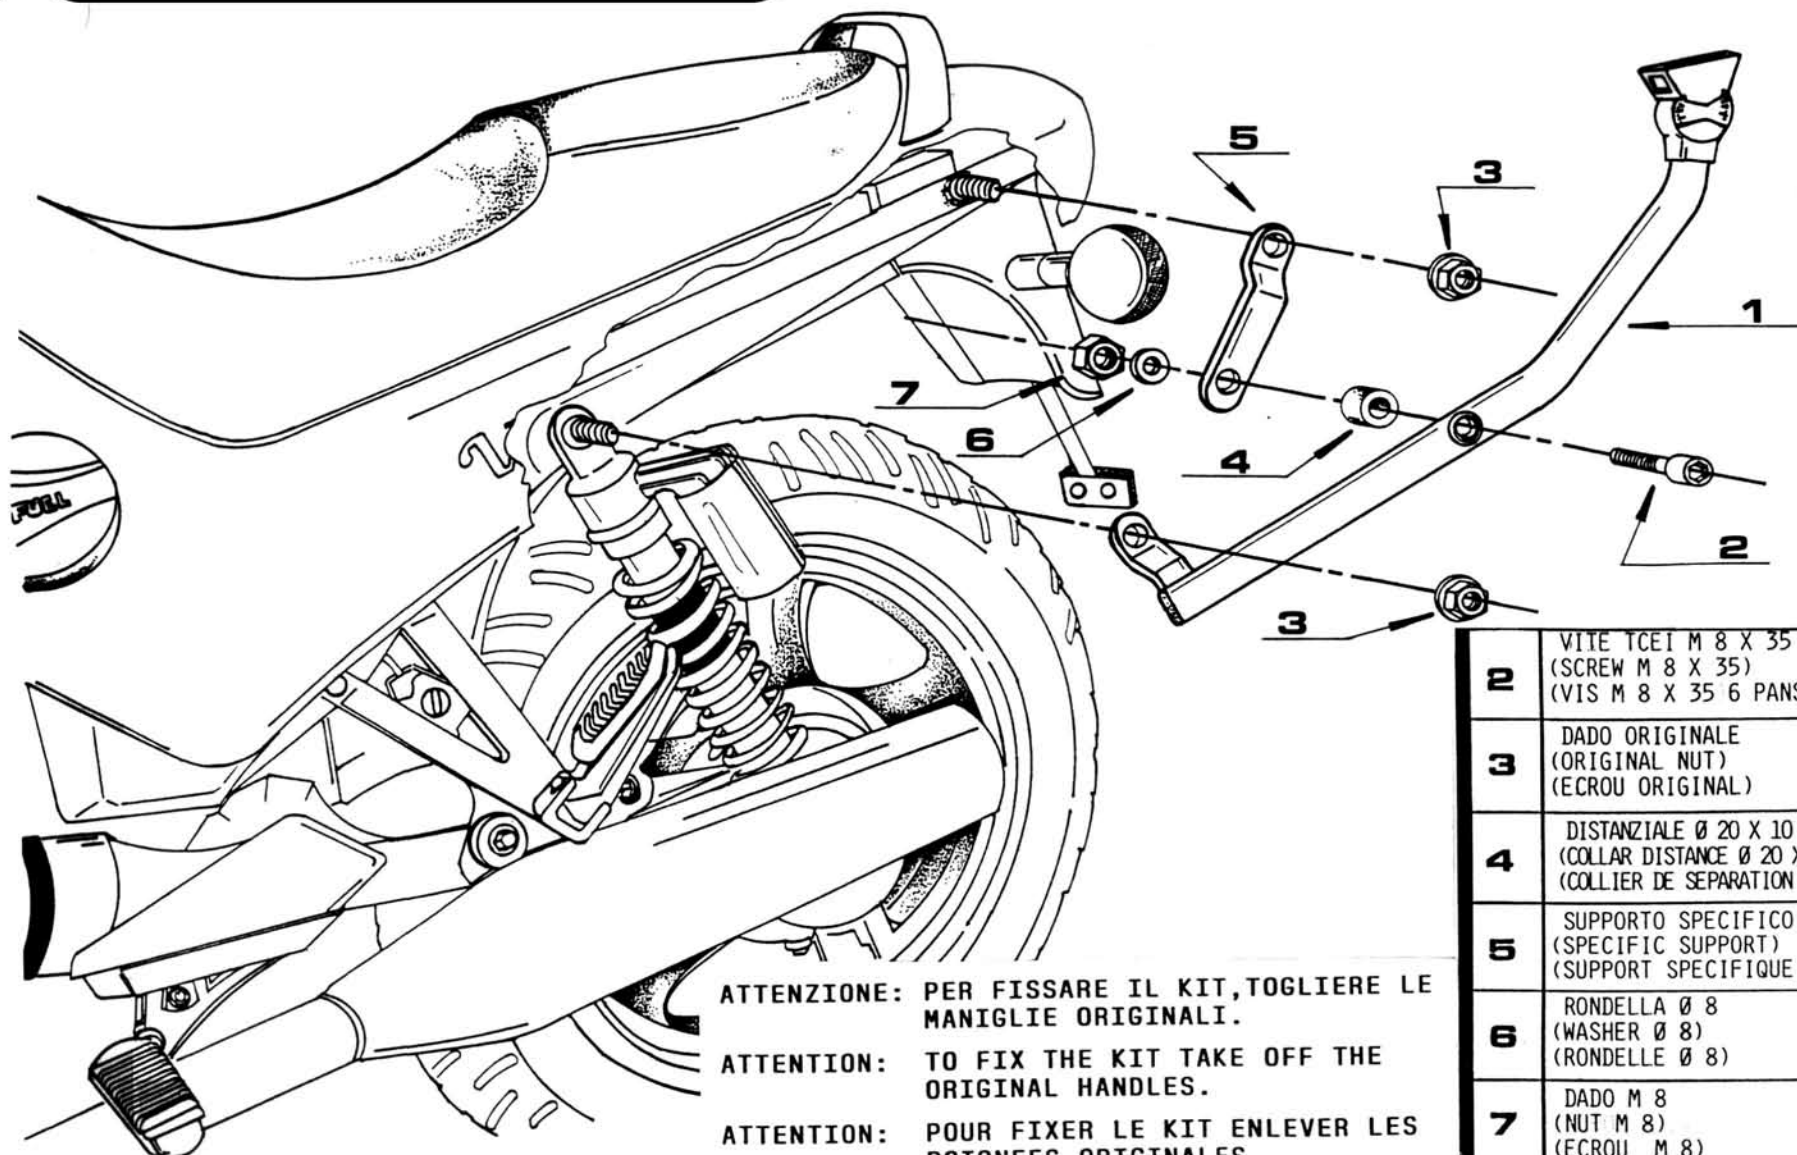

ATTENZIONE: PER FISSARE IL KIT, TOGLIERE LE MANIGLIE ORIGINALI.

ATTENTION: TO FIX THE KIT TAKE OFF THE ORIGINAL HANDLES.

ATTENTION: POUR FIXER LE KIT ENLEVER LES POIGNEES ORIGINALES.

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE')
1	MONORACK	2

2	VITE TCEI M 8 X 35 (SCREW M 8 X 35) (VIS M 8 X 35 6 PANS CREUX)	2
3	DADO ORIGINALE (ORIGINAL NUT) (ECROU ORIGINAL)	-
4	DISTANZIALE Ø 20 X 10 (COLLAR DISTANCE Ø 20 X 10) (COLLIER DE SEPARATION Ø 20 X 10)	2
5	SUPPORTO SPECIFICO (SPECIFIC SUPPORT) (SUPPORT SPECIFIQUE)	2
6	RONDELLA Ø 8 (WASHER Ø 8) (RONDELLE Ø 8)	2
7	DADO M 8 (NUT M 8) (ECROU M 8)	2